

## A/C REMOTE CONTROL USER MANUAL



**GB**

OWNER'S MANUAL  
ENGLISH

**I**

MANUALE DELL'UTENTE  
ITALIANO

**F**

MANUEL DE L'UTILISATEUR  
FRANÇAIS

**D**

GEBRAUCHSANWEISUNG  
DEUTSCH

**E**

MANUAL DEL USUARIO  
ESPAÑOL

**NL**

BEDIENING  
NEDERLANDS

 
**AHI CARRIER S.E. EUROPE AIRCONDITIONING S.A.**



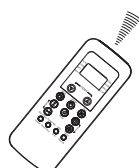
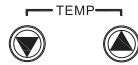


18, KIFISOU AVENUE  
10442 ATHENS, GREECE  
TEL.,; +30-210-6796300.

## CONTENTS

 
1 Quick Start	02
2 Display	03
3 Button	04
4 Operation	08
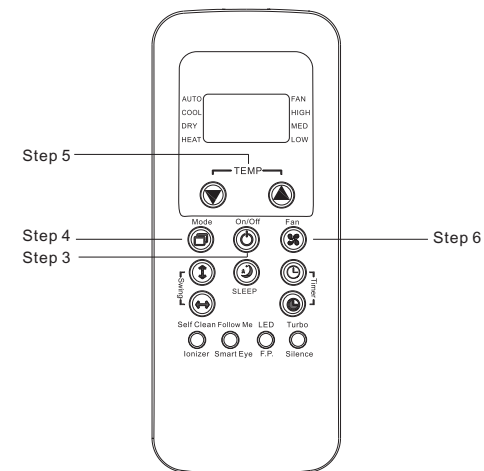
### 1. QUICK START

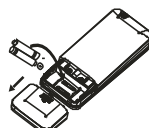


Step 1	<b>FIT BATTERIES</b> 	<b>SELECT MODE</b> <b>[Auto/ Cool/ Dry/ Heat/ Fan]</b> 
Step 2	<b>POINT REMOTE TOWARD UNIT</b> 	<b>SELECT TEMPERATURE</b> <b>[17°C~30°C]</b> 
Step 3	<b>PRESS POWER BUTTON</b> <b>NOTE: The unit will operate on default settings [24°C, Auto mode, Auto fan speed].</b> 	<b>SELECT FAN SPEED</b> <b>[Auto/Low/ Med/ High]</b> 

## 2. DISPLAY

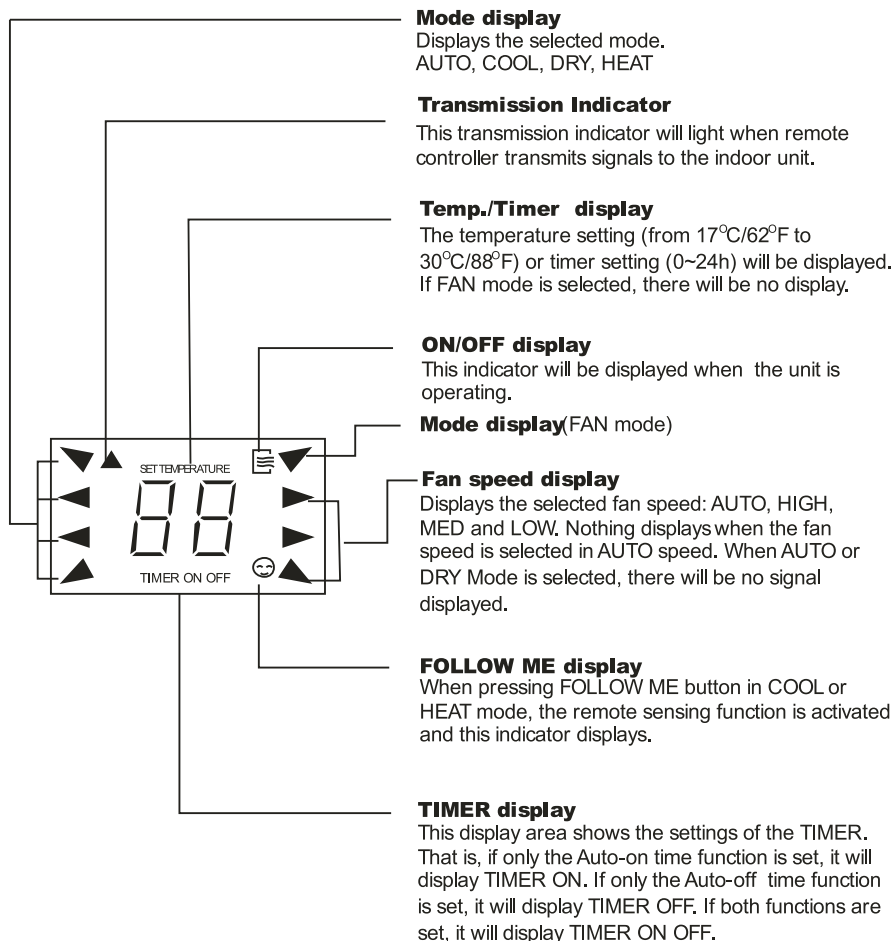

## 3. BUTTONS

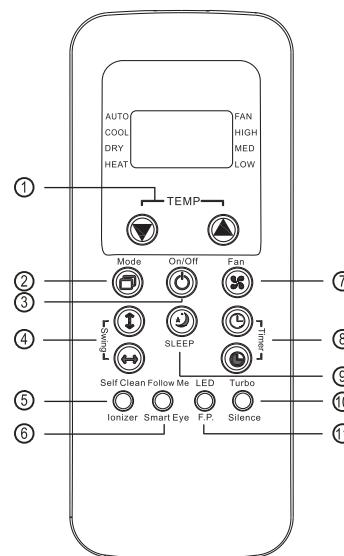 


### NOTE:

1. Vertical swing, Ionizer, Smart eye, Silence are not available for standard models;
2. Buttons design might be slightly different from the actual one.

- 1 UP Button (▲)**  
Press this button to increase the setting temperature
- DOWN Button (▼)**  
Press this button to decrease the setting temperature
- 2 MODE Button (⊞)**  
Press the mode button repeatedly to change operation mode  
→ AUTO → COOL → DRY → HEAT → FAN  
**NOTE:** HEAT mode will not be activated for cooling only models
- 3 ON/OFF Button (⏻)**  
Operation starts when this button is pressed and stops when this button is pressed again.
- 4 SWING Button (↕)**  
The horizontal louver will move an angle of 6 degree for each press. If keep pushing more than 2 seconds, the louver will swing up and down automatically.
- SWING Button (↕)**  
The vertical louver will move an angle of 6 degree for each press. And the temperature display area of indoor unit displays '⌂' for one second. If keep pushing more than 2 seconds, the vertical louver swing feature is activated. And the indoor unit displays 'IIII', flash four times, then the temperature setting reverts back. If the vertical louver swing feature is stopped, it displays 'LC' and remains on for 3 seconds.
 
## 3. BUTTONS

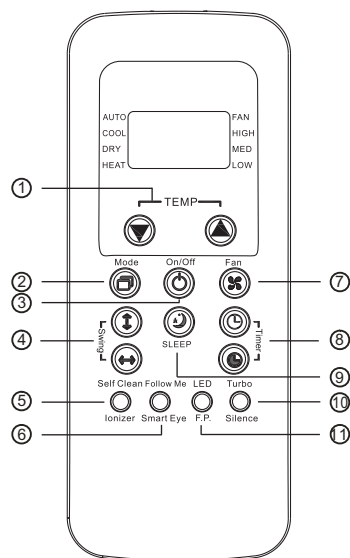

### 5 SELF CLEAN / IONIZER Button:

- Active/Disable SELF CLEAN function for each Press.
- Under SELF CLEAN mode, the air conditioner will automatically clean and dry the evaporator and keep it as fresh for the next operation.
- Press the button more than 2 seconds, the ionizer function will be activated, press more than 2 seconds again to disable.
- When the ionizer function is initiated, the Ionizer/ Plasma Dust Collector (depending on models) is energized and will help to remove pollen and impurities from the air.

### 6 FOLLOW ME / SMART EYE Button

 
- Disable/Active FOLLOW ME function for each press.
- When the Follow Me function is activated, the remote display is actual temperature at its location. The remote control will send this signal to the air conditioner every 3 minutes until press the FOLLOW ME button again.
- The Follow Me function is not available under DRY and FAN mode. Switch the operation mode or turn off the unit will cancel the Follow Me function automatically.
- When press more than 2 seconds, the SMART EYE function will be activated, press more than 2 seconds again to disable.
- Under SMART EYE mode, with the built-in infrared sensor, the unit can detect existence of humans in the room. If the unit keeps detecting no human activity for 30 min, it will automatically enter standby (monitor) status in order to save electricity. And the unit will automatically start and resume operation if sensing human activity again.

### 7 FAN Button ( )

Press this button to select the fan speed:

→ AUTO → LOW → MED → HIGH

## 3. BUTTONS

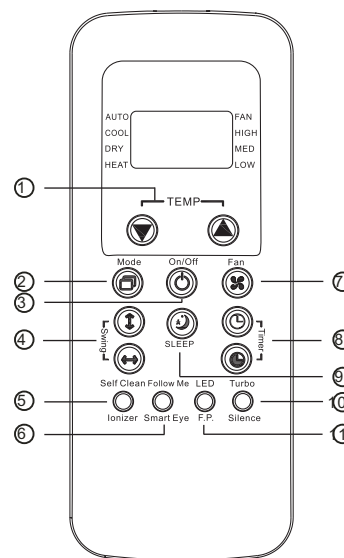

### 8 TIMER ON Button ( )

Press this button to initiate the auto-on time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-on time to 0.0.

### TIMER OFF Button ( )

 
Press this button to initiate the auto-off time sequence. Each press will increase the auto-timed setting in 30 minutes increments. When the setting time displays 10, each press will increase the auto-timed setting 60 minutes increments. To cancel the auto-timed program, simply adjust the auto-off time to 0.0.

### 9 SLEEP Button ( )

- Active/Disable sleep function. It can maintain the most comfortable temperature and save energy.
- For the detail, see "sleep operation" in "USER'S MANUAL".

**NOTE:** While the unit is running under SLEEP mode, it would be cancelled if MODE, FAN or ON/OFF button is pressed.

## 3. BUTTONS

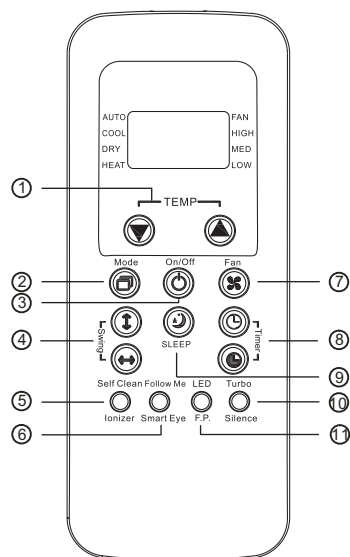


### 10 TURBO/SILENCE Button:

- Active/Disable TURBO function for each press.
- Turbo function enables the unit to reach the preset temperature at cooling or heating operation in the shortest time(if the indoor unit does not support this function, there is no corresponding operation happened when pressing this button.)
- Press the button more than 2 seconds, the SILENCE function will be activated, press it more than 2 seconds again to disable.
- When silence function is activated, the compressor will operate at low frequency and the indoor unit will bring faint breeze, which will reduce the noise to the lowest level and create a quiet and comfortable room for you.
- Due to low frequency operation of compressor, it may result in insufficient cooling and heating capacity.

### 1 LED/F.P. Button:

- Press this button to clear or light the display on the indoor unit.
- During the heating operation(only when the setting mode is HEAT), press this button more than 2 seconds, the freeze protection function is activated. The unit will operate at high fan speed with the temperature automatically set to 8°C(46°F).The display window of indoor unit will display 'FP'. For the unit without display area, the defrost indicator light will be keeping on for 2 seconds, and then be off for 2 seconds by turns. Press ON/OFF,SLEEP, F.P., MODE, FAN SPEED, UP, DOWN button while operating will cancel the freeze protection function.
 
## 4. OPERATION

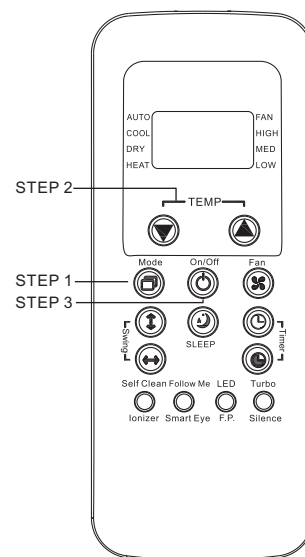

### Auto mode

Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.

 
1. Press the **MODE** button to select Auto.
2. Press the **UP/DOWN** button to set the desired temperature. The temperature can be set within a range of 17°C~30°C(62°F~88°F) in 1°C(2°F) increments.
3. Press the **ON/OFF** button to start the air conditioner.

### NOTE

1. In the Auto mode, the air conditioner can logically choose the mode of Cooling, Fan, and Heating by sensing the difference between the actual ambient room temperature and the setting temperature on the remote controller.
2. In the Auto mode, you can not switch the fan speed. It has already been automatically controlled.
3. If the Auto mode is not comfortable for you, the desired mode can be selected manually.

### Cooling /Heating/Fan mode

Ensure the unit is plugged in and power is available.

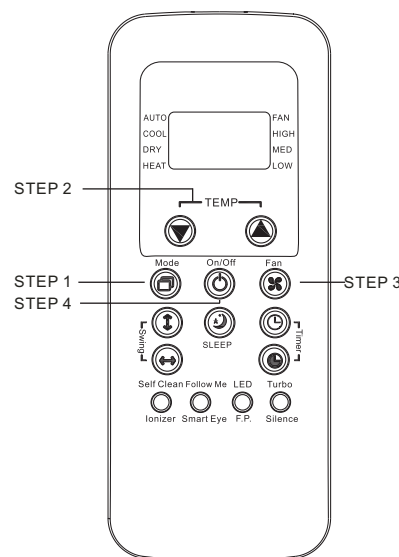


1. Press the **MODE** button to select COOL, HEAT or FAN mode.
2. Press the **UP/DOWN** buttons to set the desired temperature. The temperature can be set within a range of 17°C~30°C(62°F~88°F) in 1°C(2°F) increments.
3. Press the **FAN** button to select the fan speed in four steps- Auto, Low, Med, or High.
4. Press the **ON/OFF** button to start the air conditioner.

### NOTE

 In the FAN mode, the setting temperature is not displayed in the remote controller and you are not able to control the room temperature either. In this case, only step 1, 3 and 4 may be performed.

## 4. OPERATION

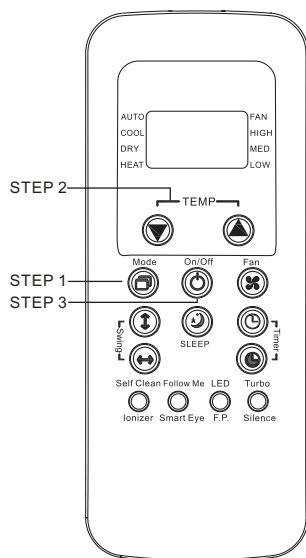

### Dry mode

- Ensure the unit is plugged in and power is available. The OPERATION indicator on the display panel of the indoor unit starts flashing.
1. Press the **MODE** button to select DRY mode.
  2. Press the **UP/DOWN** buttons to set the desired temperature. The temperature can be set within a range of 17°C~30°C (62°F~88°F) in 1°C(2°F) increments.
  3. Press the **ON/OFF** button to start the air conditioner.

### NOTE:

In the Dry mode, you can not switch the fan speed. It has already been automatically controlled.

### Timer operation

#### Timer ON only

This function will allow the unit to start automatically at the set time. The **TIMER ON** can be set while the unit is on or off.

#### **UNIT ON**

 
- Press the **TIMER ON** button to initiate the auto-on time sequence. The set time is displayed in the remote control display. Every time the **TIMER ON** button is pressed, the time will increase by 30 minutes, up to 10 h. It will increase by 60 minutes, afterwards, until the time setting reaches 24h.
- When the **TIMER ON** is set, the **TIMER** light on unit illuminates. The unit will continue to run at the set time.

#### **UNIT OFF**

- Set the timer described in the **UNIT ON** section.
- The unit will start at the set time.

Adjust the **TIMER ON** settings to 0.0 to cancel this option.

## 4. OPERATION

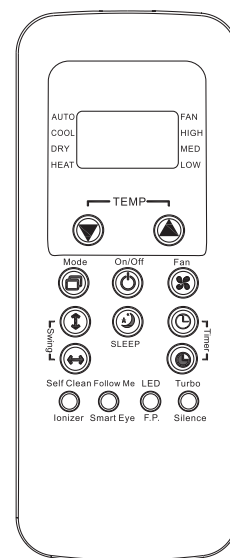

### Timer OFF only

This function will allow the unit to stop automatically at the set time. The timer can be set while the unit is on or while it is off.

#### **UNIT ON**

- Press the **TIMER OFF** button to initiate the auto-off time sequence. The set time is displayed in the remote control display. Every time the **TIMER OFF** button is pressed, the time will increase by 30 minutes, up to 10 h. It will increase by 60 minutes, afterwards, until the time settings reach 24h.
- When the **TIMER OFF** is set, the timer light on the unit illuminates and the unit turns off automatically at the set time.

#### **UNIT OFF**

- Set the **TIMER** off as described in the **UNIT ON** section.
- The **TIMER** display on the unit illuminates and the unit will remain off.

Adjust the **TIMER OFF** settings to 0.0 to cancel this option.

### Timer ON and Timer OFF

Use both functions to program the unit to turn on and shut off at specified times.

#### **UNIT OFF**

- Set **TIMER ON** as previously described.
- Set **TIMER OFF** as previously described.
- The unit will start automatically at the set **TIME ON** and will turn off at the set **TIME OFF**.

#### **UNIT ON**

- Set **TIME OFF** as previously described.
- Set **TIME ON** as previously described.
- The unit will turn off automatically at the set **TIME OFF** and will turn on at the set **TIME ON**.